

Pop Up Canopy Tent

- Quick Instructions 1/2



Step 1

Take your frame and slightly expand it open to expose the corner bars.



Step 2

Take your canopy graphic and place it on top of the frame.



Step 3

Place each corner of the canopy graphic and Hook Velcro connects to the loop Velcro on the frame.



Step 4

Connect the center lift pole of the stand to the center of the canopy. There is a spot in the center it connects to.



Step 5

After you have connected each corner to the Hook & Loop <Velcro> and centered the lift pole to the canopy, expand your frame fully.



Step 6

Push each of the corners up until you hear it latch, and slide the corner of canopy down to cover



Step 7

Attach the Velcro strap to the frame to support.



Step 8

Expand each leg of the frame by pushing the red button down and pull the leg out until desired height.



Step 9

Take your backwall graphic and Velcro it on the top of the backwall and the back end of your canopy, then tie it down with the bungee.

Continue on the next page

Pop Up Canopy Tent

- Quick Instructions 2/2



Step 10

Grab 2 of the larger poles and 1 small pole and connect them together creating 1 rail that slides through the pole pocket on the bottom of the Backwall graphic.



Step 11

You will notice that there are 2 different types of clamps for a rail. **Flat top clamps** and **Triangle top clamps**. Grab one of each of the clamps and clamp it around the frame's leg. The clamp should fit snug around the leg then slide the pole from the graphic and insert it into the clamp. Then tighten the clamp with the screw. Repeat it on the other side.



Step 12

Repeating Step 10 & 11, make 2 large poles to be used on the Sidewall graphic. When placing the clamps on, make sure that the top clamp is above the leg clamp to add extra support. Do that for both sides of canopy.



Step 13

Once you have your casita canopy all set up and ready, you can spin the center lift pole up until it is firmly in place.

